

Stratus Power Pro Installation Instructions



<p>This document and the information contained herein are the property of Appareo Systems, LLC and are confidential. They may not be disseminated or redistributed without the written permission of Appareo Systems, LLC</p>	<p>APPAREO SYSTEMS, LLC FARGO, NORTH DAKOTA 58102</p>			
	<p>Stratus Power Pro Installation Instructions</p>			
<p>Document Number 600840-000063</p>	<p>Document Type Certification</p>	<p>Last Revised 20 July 2020</p>	<p>Rev 1.0</p>	<p>Sheet 1 of 13</p>

STRATUS POWER PRO

©2020 Appareo Systems, LLC. All Rights Reserved.

Stratus Power Pro Installation Instructions. All content within is copyrighted by Appareo Systems, LLC, and may not be reprinted without permission.

Appareo assumes no responsibility or liability for any errors or inaccuracies that may appear in the information content contained in this guide. Unauthorized replication of this guide is prohibited.

Appareo, Appareo Systems, Stratus Power Pro, and the Appareo and Stratus Power Pro logos are either registered trademarks or trademarks of Appareo Systems, LLC. All other trademarks and registered trademarks are the sole property of their respective owners.

Appareo Systems, LLC, 1830 NDSU Research Circle North, Fargo, ND 58102 USA.

Visit us on the web at www.appareo.com.
Questions? E-mail us at support@appareo.com.

The most recent version of this document and other Stratus Power Pro documentation can be found at the Appareo Dealer Portal at appareo.com/dealer-portal or appareo.com/resources.

Table of Contents

1. About Stratus Power Pro	5
1.1. Overview	5
1.2. TSO compliance	5
1.3. TSO deviations	5
1.4. Environmental qualifications	5
1.5. Equipment specifications	5
1.6. Required tools	6
1.7. Supplied hardware	6
1.8. Unpacking/inspection requirements	6
1.9. Limitations for installation	6
1.10. Circuit protective device marking	6
2. Mounting Stratus Power Pro	7
3. Wiring Stratus Power Pro	9
4. Troubleshooting	11
Technical Assistance	11
Appendix A	12

List of Figures

Figure 1: Mounting location	7
Figure 2: Installing Stratus Power Pro	8
Figure 3: Harness	9
Figure 4: Back of Stratus Power Pro	10

List of Tables

Table 1: TSO compliance	5
Table 2: TSO deviations	5
Table 3: Equipment specifications	6
Table 4: Required tools	6
Table 5: Supplied hardware	6
Table 6: Pin assignments	9
Table 7: DO-160G tests performed	13

Record of Revision

Revision Number	Change Description	Revision Date	Inserted By
1.0	Initial release	7/20/20	AAL

Related Documentation

Document Number	Title
Appareo 600845-000031	Stratus Power Pro Maintenance Manual
FAA AC 43.13-1B	Acceptable Methods, Techniques, and Practices - Aircraft Inspection and Repair
FAA AC 43.13-2B	Acceptable Methods, Techniques, and Practices - Aircraft Alterations
FAA TSO-C71	Airborne Static ("DC to DC") Electrical Power Converter (For Air Carrier Aircraft)
RTCA DO-160G	Environmental Conditions and Test Procedures for Airborne Equipment

1. About Stratus Power Pro

1.1. Overview

Stratus Power Pro is a dual 3 amp USB charging hub used to power and charge electronic devices in the cockpit. Stratus Power Pro has one USB-C charging port and one USB-A charging port.

1.2. TSO compliance

Stratus Power Pro is compliant with the following Technical Standard Order:

Reference/Issue	Title
FAA TSO-C71	Airborne Static ("DC to DC") Electrical Power Converter (For Air Carrier Aircraft)

Table 1: TSO compliance

1.3. TSO deviations

TSO	Section	Deviation
TSO-C71	Subpart B	Environmental qualification testing was performed to DO-160G, not DO-60.

Table 2: TSO deviations

1.4. Environmental qualifications

Stratus Power Pro is tested to DO-160G. The Stratus Power Pro Environmental Qualification form is found in Appendix A of this document.

1.5. Equipment specifications

Characteristic	Specification
Width	1.848 inches (46.95 mm)
Height	1.848 inches (46.95 mm)
Depth*	1.263 inches (32.10 mm)
Stratus Power Pro Unit Weight	0.16 lbs. (.07 kg)
Operational Temperature Range	-20°C to +55°C
Input Voltage Range	10 to 32 VDC
Nominal Current Draw	<25 mA at 14 V and 28 V with no USB connections 1.2 A at 28 V at full output load on both ports 2.4 A at 14 V at full output load on both ports
Power Input	0.052 W with no USB connections 33.75 W max at 3A output load on both ports

Output Voltage Range	5.0 VDC +/- 0.25 V
Max Current Output	3.0 A per port
Power Output	30 W

*includes mating connector, excludes bend radius

Table 3: Equipment specifications

1.6. Required tools

The following tools are needed for installation of Stratus Power Pro.

Tool	Part Number	Used For
1 ¼ inch drill bit	--	Drilling hole in instrument panel
Multimeter	--	Measuring output power and polarity
Crimp tool	0640160201	Power connectors

Table 4: Required tools

1.7. Supplied hardware

Item	Appareo Part Number	Quantity
Stratus Power Pro Assembly	153510-000169	1
Power Connector Receptacle	251015-000115	1
Connector Terminals	251015-000116	2
Stratus Power Pro Panel Cover	353070-000074 or 353070-000242	1
Screw	356060-000100	2

Table 5: Supplied hardware

1.8. Unpacking/inspection requirements

When unpacking Stratus Power Pro, visually inspect for any damage to the unit or missing components. If damage or missing parts are present, contact Appareo.

1.9. Limitations for installation

This article meets the minimum performance and quality control standards required by a technical standard order (TSO). If you are installing this article on or in a specific type or class of aircraft, you must obtain separate approval for installation.

1.10. Circuit protective device marking

Ensure that the circuit protective device marking is in accordance with AC 43.13-2B, Chapter 2, Section 207, Sub-Section f., Paragraph (1).

2. Mounting Stratus Power Pro

NOTE: Stratus Power Pro is only compatible with a panel thickness of .040" to .125".

1. Disconnect aircraft power.
2. Locate an area in the panel to mount Stratus Power Pro. The location must provide adequate clearance in the front and back of the unit based on the dimensions given in Table 3.

ATTENTION: Process may result in metal shavings. Ensure that they do not fall behind the aircraft panel.

3. Drill out a circle in the mounting location with a 1 ¼ inch drill bit using the measurements in Figure 1. Then, cut the notch in the top of the hole.

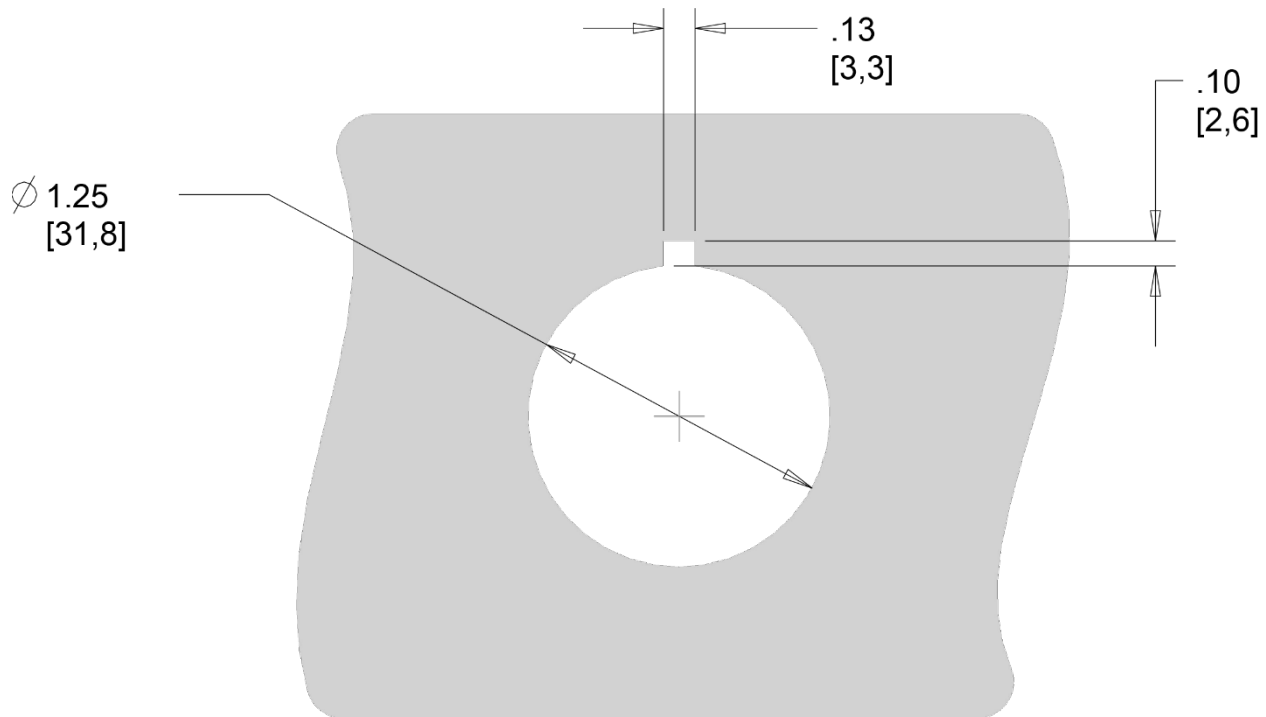


Figure 1: Mounting location

4. Place the Stratus Power Pro unit behind the panel and align the front of the unit with the hole. Place the panel cover over the front of the unit and secure with screws.

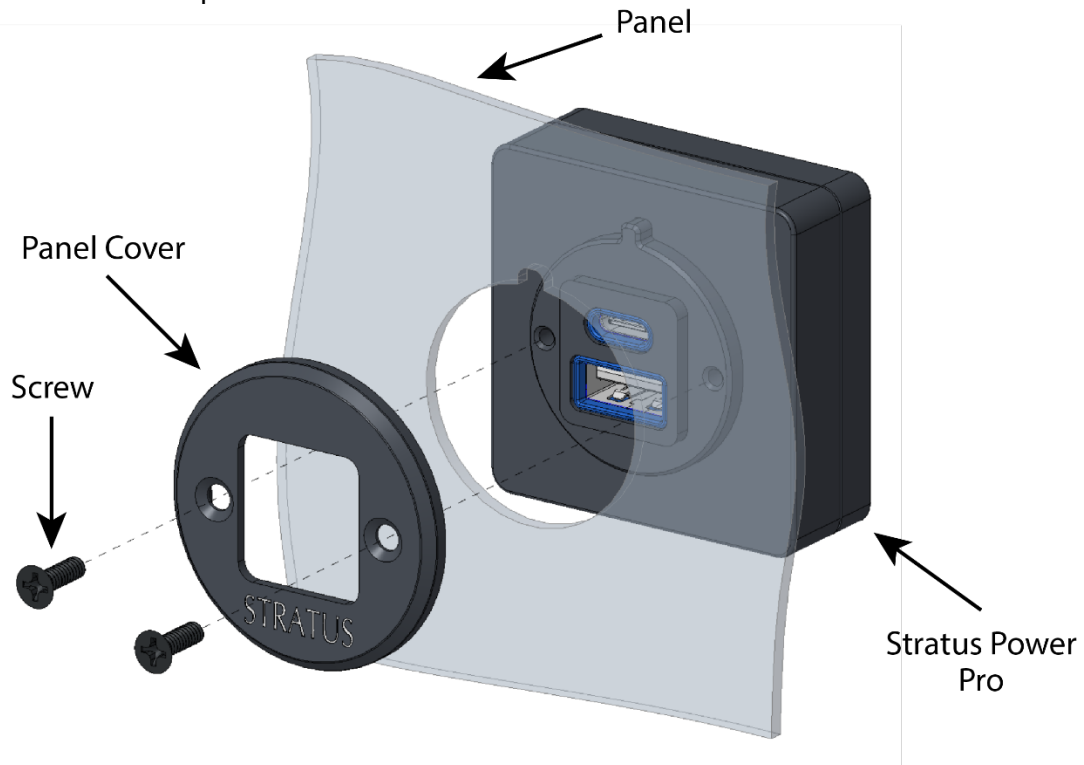


Figure 2: Installing Stratus Power Pro

3. Wiring Stratus Power Pro

The installer must supply 20-22 gauge wiring and install it in accordance with FAA AC 43.13-1B and AC 43.13-2B. Wire length and routing will vary by installation.

The installer must also supply a circuit protective device for use with Stratus Power Pro. Use a 2A breaker for 28V aircraft and a 4A breaker for 14V aircraft.

NOTE: If installing multiple Stratus Power Pros, each device must have its own circuit protective device.

1. Wire Stratus Power Pro according to Table 6. Provide a service loop.

Pin #	Pin Name	Description
1	Power	10-32 VDC
2	Ground	--

Table 6: Pin assignments

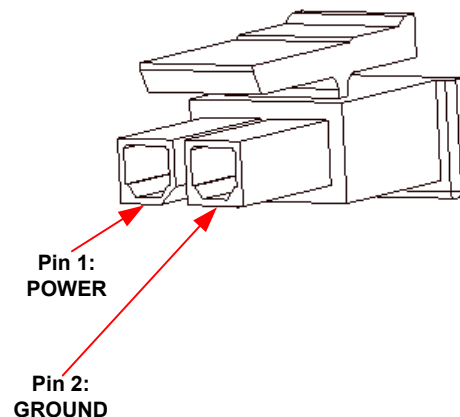


Figure 3: Harness

2. Verify input power and polarity.
 - a. Connect aircraft power and ensure that the breaker is pushed in.
 - b. On the power harness, place the negative probe of a multimeter on Pin 2 and the positive probe on Pin 1.
 - c. Measure the voltage across the two wires using a multimeter. The voltage reading should be equal to your aircraft power.
 - d. Disconnect aircraft power.

3. Connect the power receptacle into the header on the back of Stratus Power Pro.

CAUTION: When installing or removing the connectors from the Stratus Power header, use caution to avoid pulling out the input power port.

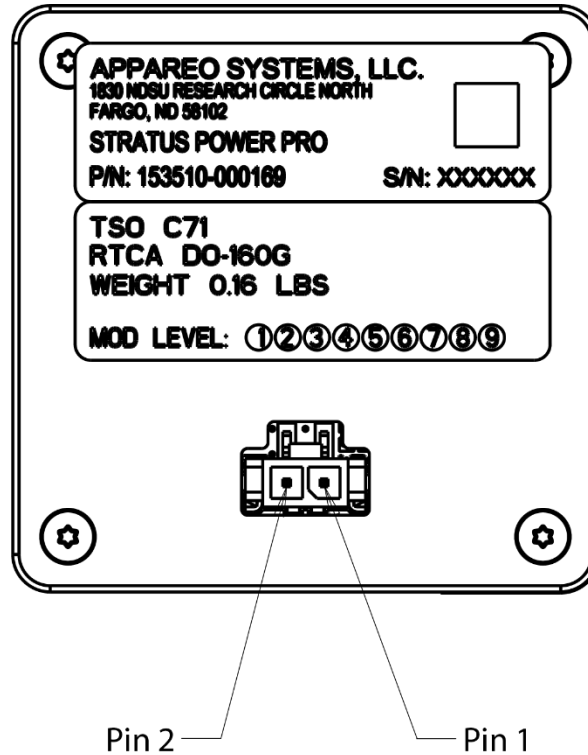


Figure 4: Back of Stratus Power Pro

4. Connect aircraft power and ensure that the breaker is pushed in.
5. Verify the voltage output of Stratus Power Pro before connecting any devices.

4. Troubleshooting

Problem	Troubleshooting Steps
Stratus Power Pro is not powering a device.	<ul style="list-style-type: none"> • Verify that the circuit protective device is functioning correctly. • Verify that the polarity on the power connector is correct.

Technical Assistance

For support, please contact Appareo at support@appareo.com.

By mail:

1830 NDSU Research Circle North
 Fargo, ND 58102
 United States of America

Appendix A

Nomenclature: Stratus Power Pro

Part number: 153510-000169

TSO number: TSO-C71

Manufacturer: Appareo Systems

Address: 1830 NDSU Research Circle North, Fargo, ND 58102, USA

Conditions	DO-160G Section	Description of tests conducted
Temperature and Altitude	4.0	
Short-Time Operating Low Temperature	4.5.1	Equipment tested to Category F1.
Operating Low Temperature	4.5.2	Equipment tested to Category F1.
Short-Time Operating High Temperature	4.5.3	Equipment tested to Category F1.
Operating High Temperature	4.5.4	Equipment tested to Category F1.
In-Flight Loss of Cooling	4.5.5	Equipment identified as Category X, no test performed.
Altitude	4.6.1	Equipment tested to Category F1.
Decompression	4.6.2	Equipment identified as Category X, no test performed.
Overpressure	4.6.3	Equipment identified as Category X, no test performed.
Temperature Variation	5.0	Equipment tested to Category C.
Humidity	6.0	Equipment tested to Category A.
Operational Shocks and Crash Safety	7.0	
Operational Shocks	7.2	Equipment tested to Category B. 11ms duration.
Crash Safety	7.3	Equipment tested to Category B. Aircraft type: 5R
Vibration	8.0	
Fixed Wing Aircraft Standard Vibration	8.5	Equipment tested to Category S. Curve M.
Sine-on-Random for Category U	8.8.2	Equipment tested to Category U. Curve G.

Explosive Atmosphere	9.0	Equipment identified as Category X, no test performed.
Waterproofness	10.0	Equipment identified as Category X, no test performed.
Fluids Susceptibility	11.0	Equipment identified as Category X, no test performed.
Sand and Dust	12.0	Equipment identified as Category X, no test performed.
Fungus Resistance	13.0	Equipment identified as Category X, no test performed.
Salt Fog	14.0	Equipment identified as Category X, no test performed.
Magnetic Effect	15.0	Equipment tested to Category Z.
Power Input	16.0	
Normal Operating Conditions (dc)	16.6.1	Equipment tested to Category BXX.
Voltage (average value dc)	16.6.1.1	Equipment tested to Category BXX.
Abnormal Operating Conditions (dc)	16.6.2	Equipment tested to Category BXX.
Voltage Spike	17.0	Equipment tested to Category B.
Audio Frequency Conducted Susceptibility	18.0	Equipment tested to Category B.
Induced Signal Susceptibility	19.0	Equipment identified as Category X, no test performed.
Radio Frequency Susceptibility	20.0	Equipment identified as Category X, no test performed.
Emission of Radio Frequency Energy	21.0	
Conducted RF Emissions	21.4	Equipment tested to Category B.
Radiated RF Emissions	21.5	Equipment tested to Category M.
Lightning Induced Transient Susceptibility	22.0	Equipment identified as Category X, no test performed.
Lightning Direct Effects	23.0	Equipment identified as Category X, no test performed.
Icing	24.0	Equipment identified as Category X, no test performed.
Electrostatic Discharge	25.0	Equipment tested to Category A.
Fire, Flammability	26.0	Equipment identified as Category X, no test performed.

Table 7: DO-160G tests performed